

Technical data sheet

LHV-D3-MP

MP² BUS[®]



VAV-Compact unit – with VAV controller, dynamic Δp sensor and linear actuator

• Field of application: VAV units in comfort applications

- Application: VAV/CAV, position control
- Belimo D3, dynamic flow sensor
- Functional range differential

pressure 0...500 Pa

• Control communicative, modulating (0/2...10 V)

- Communication via Belimo MP-Bus
- Conversion of sensor signals

• Tool connection: Service socket, NFC interface

Technical data



Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	2.5 W
	Power consumption in rest position	1.5 W
	Power consumption for wire sizing	4.5 VA
	Power consumption for wire sizing note	Imax 8 A @ 5 ms
	Connection supply / control	Cable 1 m, 4x 0.75 mm ²
Data bus communication	Communicative control	MP-Bus
	Number of nodes	MP-Bus max. 8
Functional data	Actuating force motor	150 N
	Operating range Y	210 V
	Input impedance	100 kΩ
	Operating range Y variable	010 V
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point 08 V
		End point 210 V
	V'max adjustable	20100% of V'nom
	V'mid adjustable	>V'min <v'max< td=""></v'max<>
	V'min adjustable	0100% of V'nom (<v'max)< td=""></v'max)<>
	Manual override	with push-button, can be locked
Measuring data	Measuring principle	Belimo D3, dynamic flow sensor
	Installation orientation	position-independent, no zeroing necessary
	Measuring range pressure	-20500 Pa
	Functional range differential pressure	0500 Pa
	Maximum system pressure	1500 Pa
	Burst pressure	±5 kPa
	Height compensation	Adjustment of system height (range 03000 m above sea level)
	Condition measuring air	050°C / 595% RH, non-condensing
	Pressure tube connection	Nipple diameter 5.3 mm
Safety data	Protection class IEC/EN	III, Protective Extra-Low Voltage (PELV)



Technical data

ty data	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Type of action	Туре 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-2080°C [-4176°F]
	Servicing	maintenance-free
Veight	Weight	0.55 kg

Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft
 or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

ApplicationThe VAV-Compact unit is used for comfort applications for pressure-independent control of VAV
units. See Technical brochure – VAV-Compact product range for volumetric flow applications.

Pressure measurement

The integrated D3 differential pressure sensor is also suitable for very small volumetric flows. The maintenance-free sensor technology enables a wide range of applications in the HVAC comfort area such as in residential buildings, offices, hotels, etc.

Actuators

For the various applications and damper designs, various actuator variants with torque 5, 10 or 20 Nm are available to the VAV unit manufacturer.

Control functions


Volumetric flow (VAV/CAV) or position control (Open Loop)



Produ	ıct	feat	ure	es		

Application Variable Air Volume (VAV)	Variable air volume control in the V'minV'max range, demand-dependent via a modulating reference variable (analogue or bus), e.g. room temperature or CO ₂ controller for energy-saving air conditioning of individual rooms or zones.
	V'nom, Δp @ V'nom
	OEM-specific calibration parameters, suitable for the VAV unit
	Adjustment range Δp @ V'nom: 38500 Pa
	V'max (Max)
	Maximum operating volumetric flow, adjustable 20100% V'nom
	V'min (Min)
	Minimum operating volumetric flow, adjustable 0100% V'nom
Application Constant Air Volume (CAV)	Constant volumetric flow control. If required, via step switching (switching contacts) for constant volumetric flow applications.
	Steps: CLOSE / Min / Max / OPEN (Mid)
Application Position Control (Open Loop)	Position control for integration of the VAV-Compact into an external VAV control loop. Transmitter and actuator unit.
	Max
	Range: 20100 % rotation range
	Min
	Range: 0100 % rotation range
Demand Controlled Ventilation (DCV)	Output of the demand signal (damper position) to the higher-level automation system – DCV function.
Bus operation	Thanks to its MP-Bus functionality, the VAV-Compact can be easily integrated into a MP-Bus system. The communication interface and MP address is defined using service tools.
	In bus mode, a sensor (010 V / passive) can optionally be connected, e.g. a temperature sensor or a switching contact, for integration into the higher-level bus system.
Operating settings	Control functions
	Volumetric flow (VAV/CAV) or position control (Open Loop)



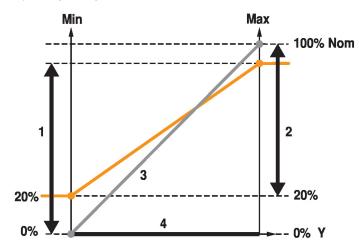

Nominal value (OEM setting) Nom Adjustment range Min 1 Adjustment range Max 2 Feedback U 0...100% Nom 3 Control Y Min...Max 4

Operating and service tools

Smartphone with Belimo Assistant App – contactless operation via the integrated NFC interface. PC-Tool (ZTH EU) – can be locally plugged into the service socket or remotely via MP connection.



Accessories

Gateways	Description	Туре
	Gateway MP to BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
Electrical accessories	Description	Туре
	Positioner for wall mounting	CRP24-B1
	Positioner for wall mounting	SGA24
Tools	Description	Туре
	Belimo Assistant App, Smartphone app for easy commissioning,	Belimo Assistant
	parametrising and maintenance	Арр
	Converter Bluetooth / NFC	ZIP-BT-NFC
	Service tool, with ZIP-USB function, for parametrisable and	ZTH EU
	communicative Belimo actuators, VAV controller and HVAC performance devices	
	Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal	ZK2-GEN

Electrical installation



Ļ

Wire colours:


1 = black


2 = red

3 = white

5 = orange

Wiring diagrams

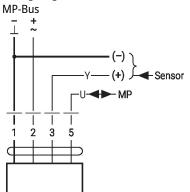


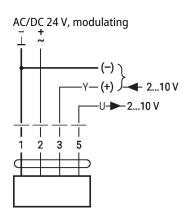




Electrical installation

Wiring diagrams

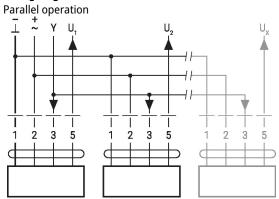


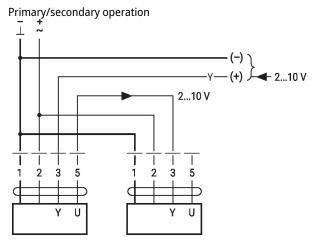


• Max. 8 actuators in parallel • Parallel operation is permitted only on non-connected axes • Do not fail to observe performance data with parallel operation

Functions

Functions with specific parameters (Parametrisation necessary) Connection on the MP-Bus

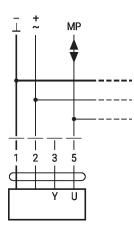


Max. 8 MP-Bus nodes

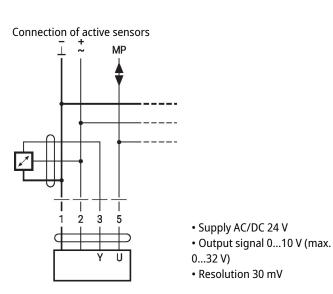



Functions with specific parameters (Parametrisation necessary)

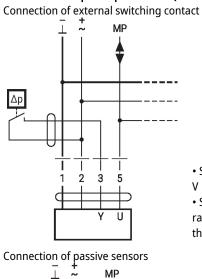


• Switching current 16 mA @ 24 V

• Start point of the operating range must be parametrised on the MP actuator as ≥0.5 V

1	235	5	Ni1000	−28+98°C	8501600 Ω ²⁾
Æ			PT1000	−35+155°C	8501600 Ω ²⁾
	1 (Ĺ	NTC	-10+160°C ¹⁾	200 Ω60 kΩ ²⁾

Depending on the type
 Resolution 1 Ohm
 Compensation of the measured value is recommended

CAV function, PC-Tool setting: CLOSE - V'min - V'max (Shut-off level 0.1 V)

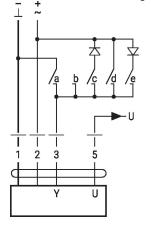

{] e.g. 1N 4007

Contact	mode 210 V	mode 010 V
а	Close	Min
b	Min	Min
С	Close	Close
d	Max	Max
е	Open	Open


Note that the contacts are mutually interlocking.
DC 24 V supply: option c and d not available
Setting for CAV application: Mode 2...10 V, shutoff level 0.1 V



Functions

Functions with specific parameters (Parametrisation necessary)

CAV function, PC-Tool setting: CLOSE - V'min - V'mid - V'max (NMV-D2M-compatible)

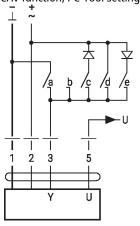

	e.g.	七 1N 4007
Contact	mode 210 V	mode 010 V
а	Close	Min
b	Min	Min
С	Mid	Mid
d	Max	Max
е	Open	Open

Note that the contacts are mutually interlocking
Setting parameters for CAV application: V'min - V'mid -V'max (NMV-D2M-compatible)



Parameter and tool overview

Settings and tool function

			Tool				
			1001				
Designation	Setting values, limits, explanations	Units	ZTH EU	PC-Tool	Assistant app	Remarks	
System-specific data							
Position	16 characters, e.g. Office 4 6th OG ZL	String	r	r/w	r/w		
Designation	16 characters: Unit designation, etc.	String	r	r/w ¹⁾	r		
Address	PP / MP18		r/w	r/w	r/w ²⁾	PP: 010 / 210 V MP18: MP mode	
V' _{max}	20100% [V' _{nom}]	 m³/h / l/s / cfm	r/w	r/w	r/w	>/= V'min	
V' _{mid}	V'minV'max		r/w	r/w	r/w		
V' _{min}	0100% [V' _{nom}]		r/w	r/w	r/w	= V'</td	
Altitude of installation	03000	m	r/w	r/w		Adaptation of ∆p sensor to altitude (meters above sea level)	
Controller Settings							
Control function	Volumetric flow / Position control (Open Loop)		-	r/w	r/w ²⁾		
Mode	010 / 210	V	r/w ²⁾	r/w	r/w ²⁾		
CAV function	CLOSE/V' _{min} /V' _{max} ; Shut-off level CLOSE 0.1 CLOSE/V' _{min} /V' _{max} ; Shut-off level CLOSE 0.5 V' _{min} /V' _{mid} /V' _{max} ; (NMV-D2M-comp.)		-	r/w	-		
Positioning signal Y	Start value: 030; Stop value: 232	- <u>v</u>	r	r/w	r		
Feedback U	Volume / Damper position / Δp		_	r/w	_	Definition of feedback signal	
Feedback U	Start value: 08; Stop value: 210	- <u>v</u>	_	r/w	_	-	
Behaviour when switched on (Power-on)	No action / Adaptation / Synchronisation		-	r/w	-		
Synchronisation behaviour			-	r/w	-	Synchronisation at damper position 0 or 100%	
Bus fail position	Last setpoint / Damper CLOSE V' _{min} / V' _{max} / Damper OPEN		-	r/w	-		
Unit-specific settings			_				
V' _{nom}	060′000 m³/h	m³/h / l/s / cfm	r	$r/(w)^{1)}$	r	Unit-specific setting value	
∆p@V′ _{nom}	38450	Pa	r	$r/(w)^{1)}$	r	Unit-specific setting value	
NFC interface	Read / Read and write			<u>r/(w)¹⁾</u>	r		
Print function label			-	W	-		
Other settings							
Direction of rotation (for Y=100%)	cw/ccw		r/w ²⁾	r/w	r/w ²⁾		
Range of rotation	Adapted ²⁾ / programmed 3095	0	_	r/w			
Torque	100 / 75 / 50 / 25	%		r/w		% of nominal torque	
Renovation of old syste	ms (Retrofit of old VAV units with leaking damper)						
Suppress damper leakage	Yes / No		-	r/w ¹⁾	-	Suppresses volume display with damper closed	

 $^{\eta}$ Write function accessible only for VAV manufacturers $^{\eta}$ Access only via Servicing level 2 2 Within the mechanical limitation




Parameter and tool overview

Settings and tool function

			Tool			_	
Designation	Setting values, limits, explanations	Units	ZTH EU	PC-Tool	Assistant app	Remarks	
Operating data							
Actual value / Setpoint Damper position		m³/h / l/s / cfm Pa / %	r _	r T	r T	T (Trend) display	
Simulation	Damper OPEN/CLOSE V'min / V'mid / V'max / Motor Stop		W	W	-		
Running times	Operating time, running time Ratio (relation)	h %	-	r	r		
Alarm messages	Setting range enlarged, Mech. overload, Stop&Go ratio too high		-	r/w	-		
Serial number	Device ID		r	r	r	Incl. production date	
Туре	Type designation		r	r	r		
Version display Configuration data	Firmware, Config. table ID		r	r	-		
Print, send			-	yes	yes		
Backup in file			-	yes	yes		
Log data / Logbook	Activities log		_	yes	-	Incl. complete setting data	

Operating controls and indicators

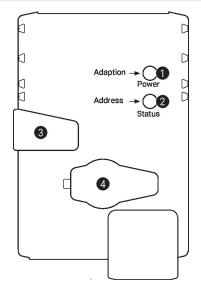

Push-button and LED display green

Off:	No power supply or malfunction
On:	In operation
Press button:	Triggers angle of rotation adaptation, followed by standard mode

2 Push-button and LED display yellow

Off:	Standard mode
On:	Adaptation or synchronisation process active
Flickering:	MP-Bus communication active
Flashing:	Request for addressing from MP client
Press button:	Confirmation of the addressing

3 Manual override button

Press button:	Gear train disengages, motor stops, manual override possible
Release	Gear train engages, synchronisation starts, followed by standard
button:	mode

4 Service plug

For connecting parametrisation and service tools

Check power supply connection

1 Off and 2 On

Possible wiring error in power supply





Installation notes	
Installation situation	Mounting VAV-Compact control equipment:
	The VAV-Compact is assembled, set and calibrated on the VAV unit in the factory by the VAV unit manufacturer.
	Installation of the VAV unit:
	The VAV unit must be installed according to the specifications of the VAV unit manufacturer.
	Installation specification Δp sensor:
	No restrictions, but it must be avoided that any condensation can run into the sensor and remain there.
	Accessibility of control equipment:
	Accessibility to the control equipment must be guaranteed at all times.
Servicing	Cleaning work during installation, commissioning or maintenance
	Belimo VAV devices are maintenance-free. We recommend dry removal of dust from the outside of the housing if necessary.
	The duct system and the VAV units are maintained on the occasion of the cleaning intervals required by law or by the specific system. Please observe the following points.
	Cleaning work on the damper, differential pressure pickup devices and pressure tubes
	When cleaning the duct system or the VAV unit, remove the pressure tubes on the VAV controller so that it will not be affected.
	Using compressed air, e.g. blowing out the differential pressure pickup devices or pressure tubes
	Before doing this work, disconnect the differential pressure pickup devices or pressure tubes from the differential pressure sensor.
	Connecting the pressure tubes
	To ensure the correct installation of the pressure tubes, we recommend marking them with + or

To ensure the correct installation of the pressure tubes, we recommend marking them with + or – before disassembly.



Service


NFC connection Belimo devices marked with the NFC logo can be operated with the Belimo Assistant App. Requirement:

- NFC- or Bluetooth-capable smartphone

- Belimo Assistant App (Google Play & Apple AppStore)


Align NFC-capable smartphone on the device so that both NFC antennas are superposed.

Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC Converter ZIP-BT-NFC to the device. Technical data and operation instructions are shown in the ZIP-BT-NFC data sheet.

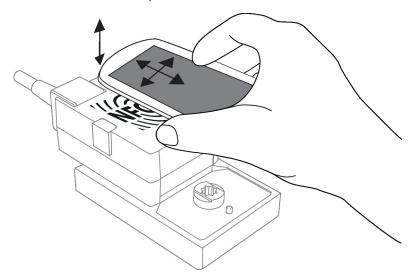


Tool connectionThe actuator can be parametrised by ZTH EU via the service socket.For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

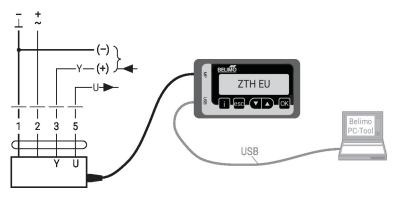


PC-Tool connection

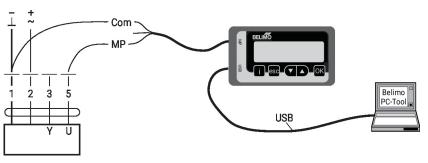



Dimensions

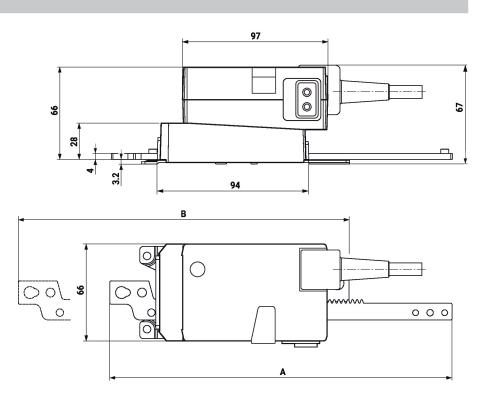

Further documentation

- VAV-Compact product range for comfort applications
- Tool connections
- Overview MP Cooperation Partners
- Introduction to MP-Bus Technology
- VAV-Universal application description
- Volumetric flow and pressure control from Belimo, product range overview